


Segmometer

- 1) Tape Measures (Ruler Graduation Meter)
- 2) Proximal tip (attached to the anthropometric tape)
- 3) Distal tip (attached to the tape hook)

Wingspan assessment kit:

- 4) Proximal thimble (with attached acrylic indicator)
- 5) Distal thimble

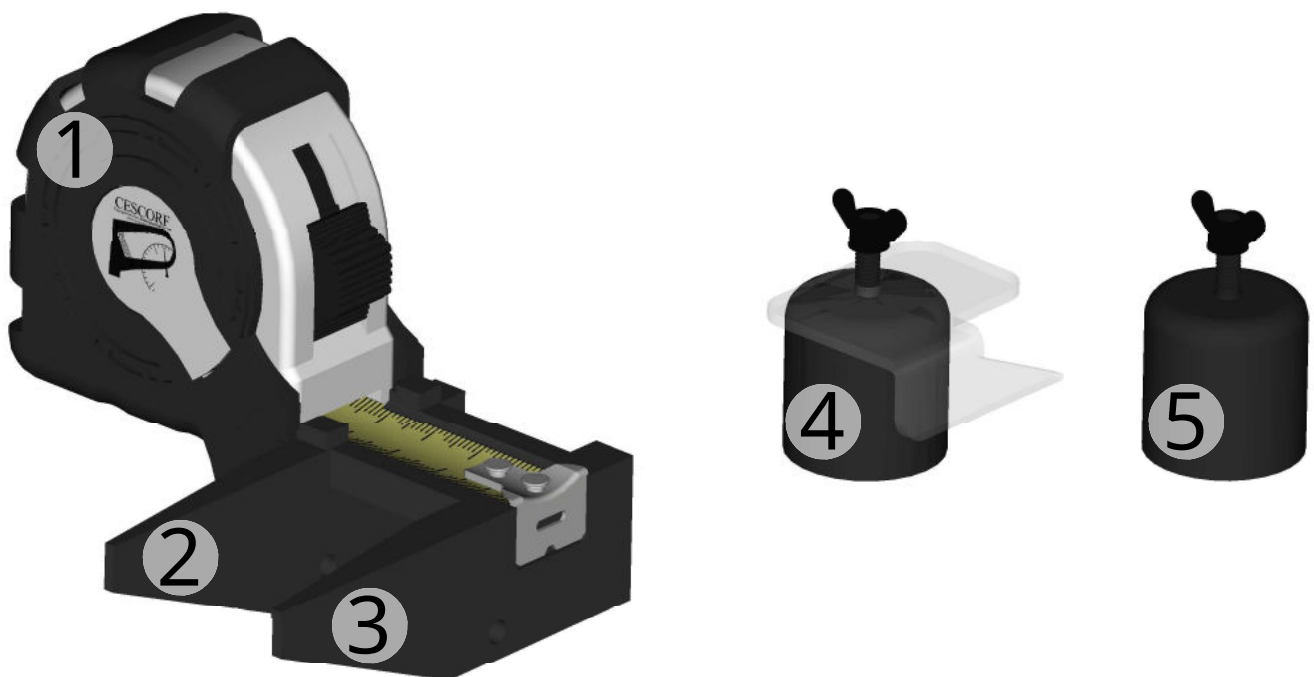

www.cescorf.com.br

Assembly begins by pulling the stepped blade approximately 20 cm out of the case and locking it.



Fit the screw of the “thimble” into the hole in the tip and screw it in with the butterfly nut.



Cescorf Equipamentos para Esporte Ltda.

Av. Copacabana, 435 | Tristeza
91900-050 | Porto Alegre | RS
CNPJ 87.965.893/0001-98